

HOW TO SELECT YOUR PERFECT WIRQUIN TOILET SEAT



1 - APPLICATION

First consider the application of the seat and the environment where it will be installed. This will help you make your material choice.

	Application	Assets
THERMOSET	HIGH TRAFFIC PUBLIC PLACES COST EFFECTIVE EVERYDAY USE	Hygienic: Naturally anti-bacterial Scratch, UV & chemical resistant Resilient: Extremely strong & durable
THERMOPLASTIC	HIGH TRAFFIC COST EFFECTIVE EVERYDAY USE	Shatterproof 100% recyclable
MOULDWOOD	EVERYDAY USE	Heavy weight Gloss finish

2 - PAN SHAPE AND SIZE

> IDENTIFY YOUR PAN SHAPE




Traditional

D-Shape

Bespoke

> CHECK DIMENSIONS OF THE SEAT AND PAN

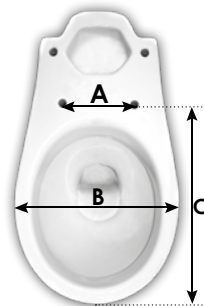

A: Distance between the middle of the 2 holes in the pan

B: Width of the pan

C: Projection from the middle of the 2 holes up to the front of the pan.

3 - HINGE TYPE

Finally, decide which seat design and hinge type best suits your requirements.



BOTTOM FIX

Bottom fixing is a traditional type of fitting where the underside of the mounting holes are accessible to allow the tightening of the hinge fixings.



TOP FIX

Top fixing is required when there is a limited/no access to the underside of the hinge mounting holes (blind hole pans).



QUICK RELEASE

Quick release for easy removal of the seat without tools, enabling thorough cleaning for maximum hygiene



SOFT CLOSE

Soft close incorporating specialist dampers for a gentle, quiet closing action, offering added safety. No more trapped fingers.



LOCK PLUS

Lock + is a clever innovation that stops seat movement by filling the gap between the bolt and the pan.

LOCK+ is compatible and included with most but not all WIRQUIN seats, depending on pan and seat dimension compatibility.

